




Motherwell Superior Plus
SADDLE BAG RAIL
Installation Guide



STEP ONE
Position rail on saddlebag where you would like it.

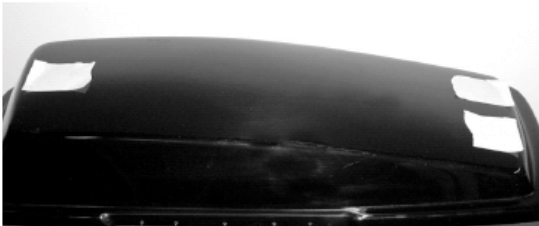


STEP TWO
Place masking tape on saddlebag in the area of rail mounts.




STEP THREE
Place rail on saddlebag for final positioning. We recommend you center rails, side to side and front to back.



STEP FOUR
Holding the rail in position trace around the three mounts. This will be where you drill.

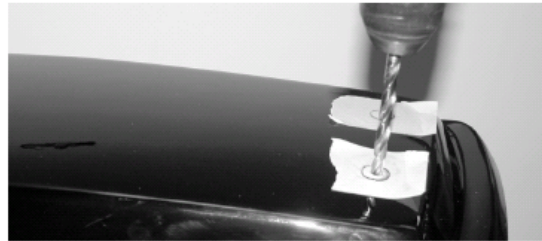

STEP FIVE
Using a 1/8 inch drill bit, drill a pilot hole in the center of your circles. Then using a 17/64 bit, drill your final hole. Repeat for all mounts. *Make sure your drill bit does not wander, or you may ruin the finish of your saddlebag.*

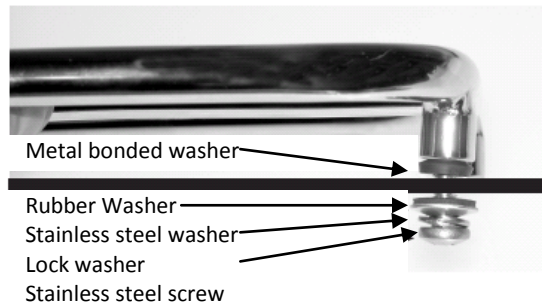

STEP SIX
Mount the rails using the hardware supplied, in the order listed (picture is not exact). **DO NOT OVER TIGHTEN.**

Parts List:

- 2 Saddlebag Rails
- 6 Stainless Steel Screws
- 6 Metal Bonded Washers
- 6 Stainless Steel Washers
- 6 Rubber Washers
- 6 Lock Washers



Warning: These rails are for appearance only and should not be used as a luggage rack. Attaching anything to them could result in damage to the saddle bags or personal injury.